



6162 Keypad



BASIC SYSTEM FUNCTIONALITY (4 DIGIT CODE + COMMAND BUTTON)

ARM: TO ARM IN AWAY MODE: ENTER 4 DIGIT CODE + 2 (AWAY) BUTTON
TO ARM IN STAY MODE: ENTER 4 DIGIT CODE + 3 (STAY) BUTTON

DISARM: TO DISARM SYSTEM: ENTER 4 DIGIT CODE + 1 (OFF) BUTTON

CHIME: TO ENABLE CHIME ON DOORS: ENTER 4 DIGIT CODE + 9 BUTTON
(TO DISABLE: 4 DIGIT CODE + 9 AGAIN)

BYPASS: TO BYPASS A ZONE: 4 DIGIT CODE + 6 + 2 DIGIT ZONE NUMBER
(EX: ZONE 2 = 02; SINGLE DIGIT ZONES REQUIRE A ZERO IN FRONT)

DURESS: TO DISARM AND SEND A DURESS SIGNAL: ENTER 1234 + 1 (OFF)

PANIC: PRESS THE * (STAR) AND # (POUND) BUTTONS AT THE SAME TIME

TO CHANGE MASTER CODE: ENTER 4 DIGIT MASTER CODE + 8 BUTTON (CODE) + 02 + NEW 4 DIGIT MASTER CODE (MUST ENTER NEW 4 DIGIT MASTER CODE 2 TIMES)

TO ADD OTHER CODES: ENTER 4 DIGIT MASTER CODE + 8 BUTTON (CODE) + (03 THROUGH 48 – CODE POSITIONS) + NEW 4 DIGIT CODE

TO DELETE OTHER CODES: ENTER MASTER CODE + 8 BUTTON (CODE) + CODE POSITION (03-48) + # + 0.