



LYRIC



BASIC SYSTEM FUNCTIONALITY

- ARM: PRESS THE "SECURITY" ICON ON THE HOME SCREEN THEN SELECT THE APPROPRIATE ARMING MODE:
"ARM AWAY", "QUICK ARM" (ARMS ALL)
"ARM STAY", "QUICK ARM" (ARMS ALL EXCEPT MOTION DETECTORS)
"ARM NIGHT STAY", HIT "ARM STAY" FIRST, THEN "NIGHT STAY", THEN "QUICK ARM" (ARMS PERIMETER AND BASEMENT MOTION DETECTOR)
- DISARM: IF ENTRY DELAY WAS TRIGGERED, SIMPLY ENTER YOUR 4-DIGIT CODE
IF DISARMING FROM ARM STAY, SELECT THE "SECURITY" ICON, PRESS "DISARM" AND ENTER YOUR 4-DIGIT CODE
- BYPASS: SELECT "SECURITY" ICON, PRESS "ZONES", THEN SELECT ZONE(S) TO BE BYPASSED, PRESS "BYPASS", ENTER YOUR 4-DIGIT CODE. ARM SYSTEM AS USUAL. BYPASS LASTS UNTIL SYSTEM IS DISARMED.
- USER CODES: SELECT "SECURITY", THEN "TOOLS". ENTER MASTER USER CODE. PRESS "USERS" ICON. SELECT "MASTER", "DURESS" OR "ADD NEW" (IGNORE "GUEST"). IF DESIRED, PRESS NAME TO IDENTIFY USER. PRESS USER CODE TO ASSIGN A 4-DIGIT CODE. PRESS SAVE. THEN ARM AND DISARM WITH THE NEW CODE TO TEST.
- DURESS: *IF* FORCED TO ARM/DISARM THE SYSTEM ENTER THE DURESS CODE: 1234
*SENDS A SILENT PANIC TO THE CENTRAL STATION AND POLICE ARE DISPATCHED
- PANIC: PRESS THE "PANIC" KEY (EXCLAMATION POINT) BELOW THE TOUCH SCREEN FOR A FEW SECONDS AND THEN SELECT THE APPROPRIATE ICON FOR POLICE, FIRE, MEDICAL.
- VOICE/CHIME: PRESS THE "SETTINGS" ICON. ADJUST SCREEN BRIGHTNESS AND VOICE/CHIME VOLUME. PRESS "VOICE" OR "CHIME" TO TURN ON OR OFF AS NEEDED. HIT "SAVE".